



Inflation Indication

The Tire Guard is a small cap that screws onto the valve stem of your tire in place of the original cap. It measures the air pressure in your tires and displays green, yellow or red color indicators. Green means that your tire is properly inflated, yellow that you've lost some pressure and red that your tire has lost more than 7 lbs. of air and should be

serviced. For more information contact: The Tire Guard, Dept. LRM, P.O. Box 975, Plainview, NY 11803-0975, (516) 942-0264, www.thetireguard.com.